



1. SCREW "X" BRACKET TO TOP OF POST W/ #14 x 3/4" SS TRUSS HEAD SCREWS (2) EA.

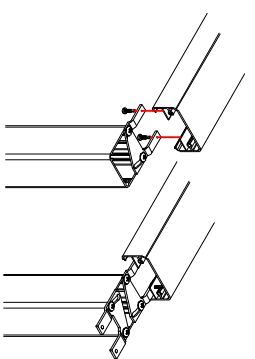

2. SCREW "X" BRACKETS TO INNER FLANGE OF 200X TOP RAIL W/ (2) EA. #10 x 3/4" SS SELF DRILLING TEK SCREW.

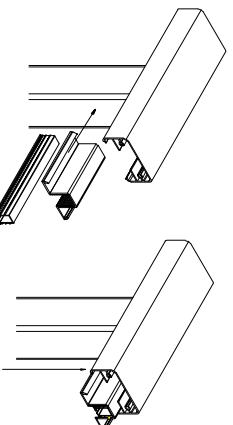

3. BUTT TOP RAIL GLASS INFILL TO SIDE OF POST AND SNAP INTO PLACE UNDER TOP RAIL INTO GROOVES.

SERIES 200X GLASS RAILING CONNECTION DETAILS